

Herit

Uniting the eras of Danish design



normann

C O P E N H A G E N

Tradition and renewal

Danish design traditions have left a clear mark on Simon Legald's chair series, Herit, which is short for heritage. The series reflects his love of classic Danish furniture craftsmanship and rose from a desire to design a versatile and strong chair that unites the different eras of Danish design. A chair in which oak and polypropylene merge in tactful synergy to create a hard-wearing, maintenance-friendly and accessible design made for modern life.



Herit chair and armchair

Collection Overview

Herit Chair
Oak



Herit Chair
Smoked Oak



Herit Chair
Black Oak



Herit Chair
Oak Upholstery



Herit Chair
Smoked Oak Upholstery



Herit Chair
Black Oak Upholstery



Herit Armchair
Oak



Herit Armchair
Smoked Oak



Herit Armchair
Black Oak



Herit Armchair
Oak Upholstery




Herit Armchair
Smoked Oak Upholstery



Herit Armchair
Black Oak Upholstery



All models are available with polypropylene seat or upholstered seat

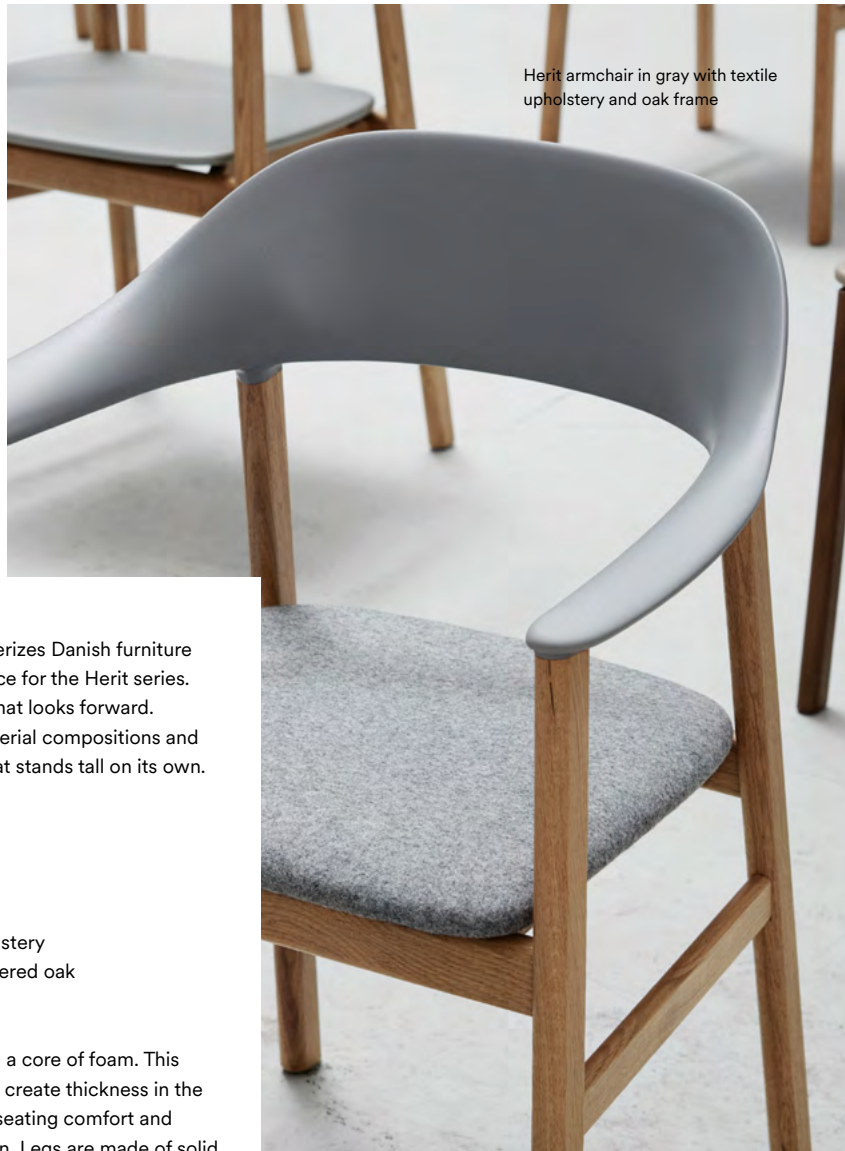

Herit armchair in gray with textile upholstery and oak frame

Product Facts

Description

The simple and honest style that characterizes Danish furniture history stands as a clear frame of reference for the Herit series. However, Herit is just as much a design that looks forward. Innovative production methods, new material compositions and timeless silhouettes give life to a chair that stands tall on its own.

Designer / Year Of Design

Simon Legald / 2018

Material

Shell: Polypropylene, PU foam with upholstery
Legs: Lacquered oak / Painted and lacquered oak

Construction

The polypropylene parts are molded with a core of foam. This innovative technique makes it possible to create thickness in the needed areas in order to obtain the best seating comfort and construct the sweeping lines of the design. Legs are made of solid wood. Herit comes assembled.

Maintenance

Shell: Clean with damp cloth.

Textile: Clean with textile or upholstery cleaner.

Leather: Clean with a damp cloth. Use warm water with soap flakes. Frequent vacuuming with a soft fitting is recommended for both textile and leather to preserve color and appearance.

We recommend to check and tighten screws every 3-6 months.

Please make sure your choice of glides is suitable to the type of flooring. We recommend to check the glides every 3-6 months.

If worn down, please replace. Please be aware that sharp objects can leave marks.

Accessories

Comes with PE glides. Felt glides can be purchased separately.

See [Glides Overview](#).

Herit chair is compatible with our [Chair Suspension](#).

Test

Herit chair

EN 1022:2005 and EN 16139:2013. Level 2

Herit armchair


EN 1022:2005 and EN 16139:2013. Level 2

Material Options

Wood Legs



Oak

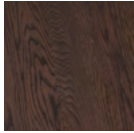


Smoked Oak



Black Oak

Polypropylene



White



Gray



Black



Sand




Dusty Green

Upholstery Seat




Gray

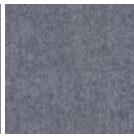

Camira Synergy
LDS16




Black

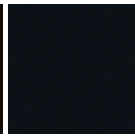

Camira Synergy
LDS27



Sand

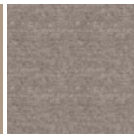

Camira Synergy
LDS32



Dusty Green



Camira Synergy
LDS49




Gray



Sørensen
Spectrum Leather
Silver Grey 30130




Black

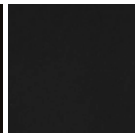

Sørensen
Spectrum Leather
Black 30114




Sand

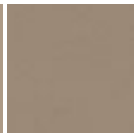


Sørensen
Spectrum Leather
Sand 30076




Dusty Green

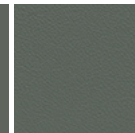

Sørensen
Spectrum Leather
White 30140




White

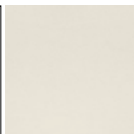

Sørensen
Spectrum Leather
White 30140

Measurements

Herit Chair

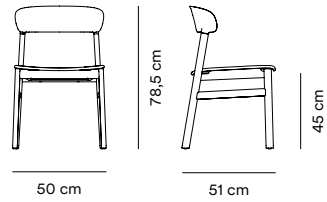

Herit Armchair

